

Thank-you for choosing Portronics. We're happy to help you understand how to use this product. Read on!

User Manual



0 to 100% Around 2.5 hrs

To charge your powerbank, connect the Type C port located on the Power Bank to the USB-A port on a computer or USB charger, using the Charging cable provided.

Charging the Digital Devices

The power bank is used for charging digital devices with DC 5V/9V/12V input.



DOS and DON'Ts

- · Make sure the Power Bank is fully charged prior to use.
- · Use a cable suitable for your device when charging it from the Power
- · When charging the Power Bank, it is recommended that you use the included charging cable.
- · Recharge the Power Bank as soon as possible to avoid shortening the
- · The battery should be charged at least every three months to avoid shortening the battery life.
- Do not wash the Power Bank with corrosive cleaner.

Technical Specifications:

Battery Capacity : 10,000mAh 3.7V (37Wh) Type-C Input : DC 5V/3A, 9V/2A, 12V/1.5A

Output (USB) : DC 4.5V/5A, 5V/4.5A, 5V/3A, 9V/2A, 12V/1.5A

Output (Type C) : DC 5V/3A, 9V/2.22A, 12V/1.66A

Total Output : 22.5W Max



www.portronics.com

For Support Visit: www.portronics.com Email: help@portronics.com

Contact No.: +91 9555245245 . 011-42413131

E-waste Management Email - info@3rrecycler.com

For E-waste & ROHS compliance refer to

(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)