 




BEEM 470 MINI

Smart LED Projector

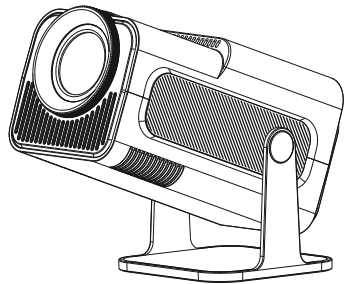

User Manual

 
 
 
Attention

Please read this manual carefully before use and keep it for future reference.


- 1.The projector is non dustproof or waterproof.
- 2.In order to reduce the risk of fire and electric shock, do not expose the projector to rain and fog.
- 3.Please use high quality power cord. should work under specified rated power supply.
- 4.When projector is working, please do not look directly into the lens, the strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
- 5.Do not cover the vents of projector. Heating will reduce the life of projector and cause danger.
- 6.Regularly clean projector vents, or dust may cause cooling malfunction.
- 7.Do not use the projector in greasy, damp, dusty or smoky environment. Oil or chemicals will cause malfunction.
- 8.Please handle with care during daily use.
- 9.Please cut off the power if the projector is out of use for long time.

Structure description

This manual is for reference only. It is subject to change without prior notice. Hotack reserves the right of final interpretation.

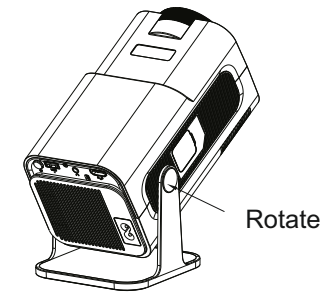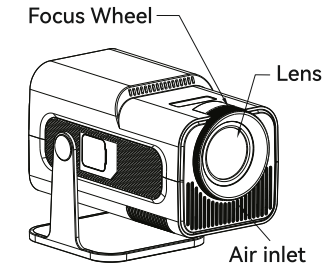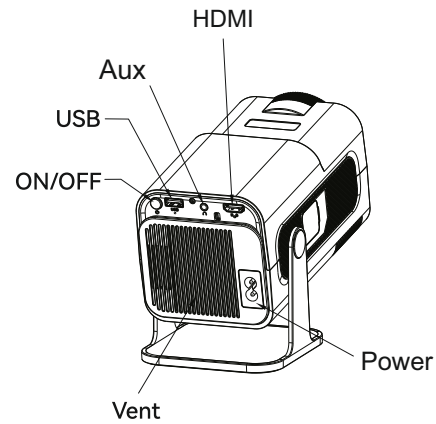

Remote Component and Functions

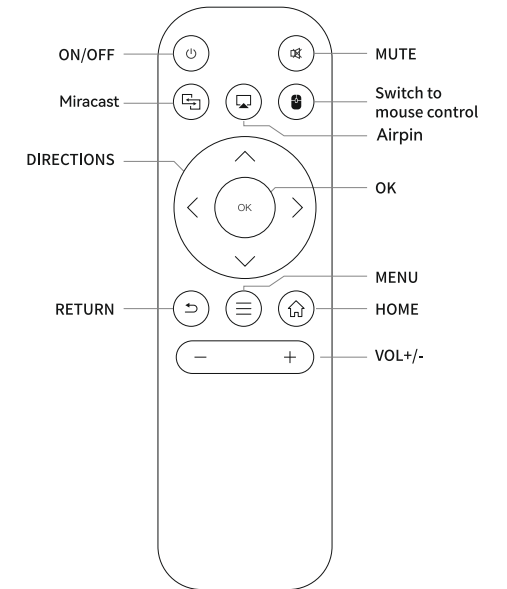 

Network Setting

⊗ Settings - Network > Choose the network and type the password that you want to connect to.



Bluetooth Setting

⊗ Settings - Bluetooth > Select Refresh to search and pair the device that you want to connect to.



Language

⊗ Settings - Language > Change the system language according to your need.



Screen Zoom

⊗ Settings - Projection Setting - Screen Zoom > Adjust the screen size by moving the adjustment bar.



Projection Mode

⊗ Settings - Projection Setting - Projection Mode > Select different mode according to your application scenario. Four modes are available < Rotate Front, Rotate Rear, Rotate Ceiling, Rotate Rear Ceiling >.



Keystone Correction

⊗ Settings - Projection Setting - Keystone Correction > The device support auto & manual keystone correction.

Note: The projector only supports vertical up and down automatic keystone correction.



Date And Time

⊗ Settings - Date And Time Setting > Set the device system date and time.

Note: Any damage caused by physical impact, water/ liquid, fire, etc. caused by the customer or nature shall not be covered under warranty.

Only product design, feature and functionality-related faults can be considered. As per the brand's discretion, the product is eligible for repair and not for replacement, during the warranty period.



Attention:

Please do not look directly into the lens when projecting to prevent the strong light doing harm to your eyes. Kids should use the projector under the supervision of adults.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hours : Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management
E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste