




User Manual

INTERFACE DEFINITION

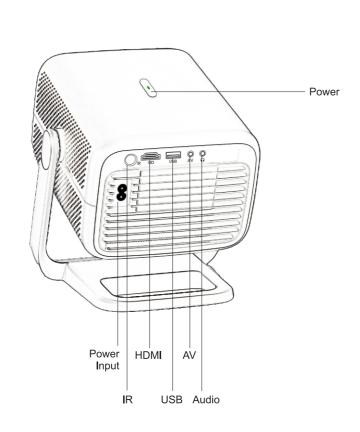



INSTALLATION

Before choosing an installation location for your projector, take the following factors into consideration:

- Size and position of your screen
- Electrical outlet location

The projector can be installed in the front-desktop position, as

Select this position with the projector placed at 5 feet height (recommended) in front of the screen. This is the most common way to position the projector for quick setup and portability.




For optimal viewing performance, the projector should be positioned at a height of 5 feet from the ground and at least 5 feet away from the wall or screen in the front.

OPERATION


Starting up the Projector

1. Plug the power cable into the projector and a power outlet. Turn on the power outlet switch, where plugged. The power indicator light on the projector will turn on after the power has been applied.

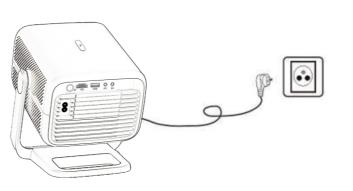

Please use the supplied power cable to avoid possible dangers such as electric shock and fire.

 2. Press the power button on the projector or remote control to start the projector.



SIGNAL SELECTION


In the case of connecting the projector to an external device such as a laptop or set-top box, you need to select the correct signal input source before accessing the computer,

There will be a drop-down selection menu as shown below.



CONNECTING HDMI DEVICES

HDMI port supports uncompressed video data transmission between compatible devices like laptops and displays over an HDMl cable (not included). You should use an HDMl cable when making a connection between them. The user first connects to the wifi, and can watch a video after connecting the projector to their device.

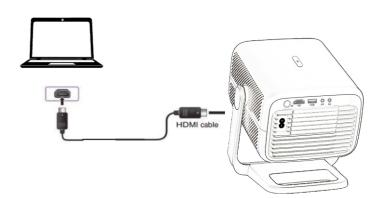

CONNECTING AV DEVICES

The AV port allows the projector to be connected to AV devices such as set-top box and gaming consoles.









YouTube, Netflix, Prime Video, Apps, Settings, etc. are shown on the homepage.



ESHARE & AIRPLAY MIRRORING


These features allow the user to connect their Android or iOS devices wirelessly to the projector and share the device screen as





You can access the settings in this panel including network settings, bluetooth settings, projection settings, language settings, date settings, system updates, and more.

SETTINGS PANEL

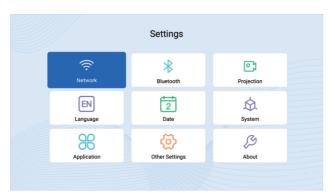


To access the apps on the projector that require the internet, you first need to connect the projector to the wi-fi.




BLUETOOTH SETTINGS

You can connect external bluetooth speakers or headphones using this setting.

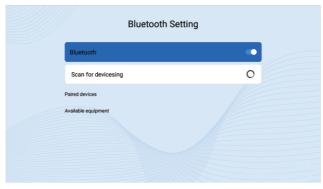

PROJECTION SETTINGS

You can adjust the installation mode and four-point corner correction. The automatic keystone correction can be turned

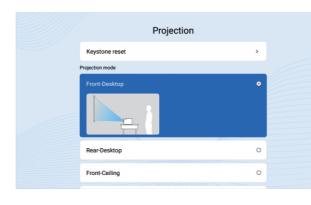



Please read this manual carefully before use and keep it for future reference.

- 1. Avoid exposure of the projector to dust, water / moisture and extreme temperatures.
- 2. This device is not dustproof or waterproof, regularly clean projector vents to avoid cooling malfunction.
- 3. Please use high quality power cord and under specified rated power supply.
- 4. When projector is working, please do not look directly into the lens, the strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
- 5. Do not cover the vents of projector and ensure it is in a wellventilated area when in use, positioned at least 2 feet away from the wall from behind. Heating will reduce the life of projector and
- 6. Please cut off the power if the projector is out of use for long time.
- 7. Users or third-party professionals should not attempt to disassemble the projector for testing and maintenance, in which case, the warranty will be void.
- 8. For optimal viewing performance, the projector should be positioned at a height of 5 feet from the ground and at least 5 feet away from the wall or screen in the front.
- 9. Use the remote control from behind the projector for convenient

Note: Any damage caused by physical impact, water/liquid, fire, etc. caused by the customer or nature shall not be covered under

Only product design, feature and functionality-related faults can be considered. As per the brand's discretion, the product is eligible for repair and not for replacement, during the warranty period.



Please do not look directly into the lens when projecting to prevent the strong light doing harm to your eyes. Kids should use the projector under the supervision of adults.



www.portronics.com

For Support

Visit: www.portronics.com Email: help@portronics.com Contact No.: +91 9555245245 (Working Hours : Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management E: info@3rrecycler.com For E-Waste & ROHS compliance refer to www.portronics.com/ewaste