

展开尺寸：220*170mm, 折叠后尺寸：110*170mm

封二封三留白，尾页留白

[封面&封底材质：300g铜版纸，过哑膜，彩色印刷

内页材质：128g铜版纸，彩色印刷]

PORTTRONICS

www.porttronics.com

For Support
 Visit : www.porttronics.com
 Email : help@porttronics.com
 Contact No. : +91 9555245245
 (Working Hours : Monday - Saturday, 10:00am - 6:00pm)

E-Waste Management
 E: info@3recycler.com
 For E-Waste & ROHS compliance
 refer to www.porttronics.com/ewaste

PORTTRONICS **BEEM510**
 SMART LED PROJECTOR



User Manual

 
SAFETY INSTRUCTIONS

Read all instructions before you use this device. Do not make any changes or create settings that are not described in this manual. If physical injury, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.


Setup

1. To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on this device.
2. Do not place this device on soft surfaces such as tablecloths or carpets, otherwise the device could be a fire hazard.
3. Do not place this device in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.
4. To prevent overheating, do not block or clog the ventilation openings.
5. Never place this device in a confined space. Leave enough space around this device for ventilation.
6. Protect this device from overexposure to direct sunlight, heat, large temperature fluctuations and moisture. Avoid extreme temperatures. The suitable operations and storage temperature for this device and its accessories is (0°F to 95°F).
7. When this device is running for a long period of time, the surface may become hot. Shut it down immediately and unplug the charger. Resume operation after this device has cooled down.
8. Always handle this device with care. Avoid touching the lens. Do not allow children to handle the device without supervision.
9. Never place heavy or sharp objects on this device.
10. To avoid electric shock, do not disassemble.
11. Use attachments or accessories specified by the manufacturer only.
12. Avoid extreme vibrations as they may damage the internal components.

The following safety instructions ensure the long service life of the projector to avoid fire or electric shock. Please read carefully and pay attention to the following warnings.

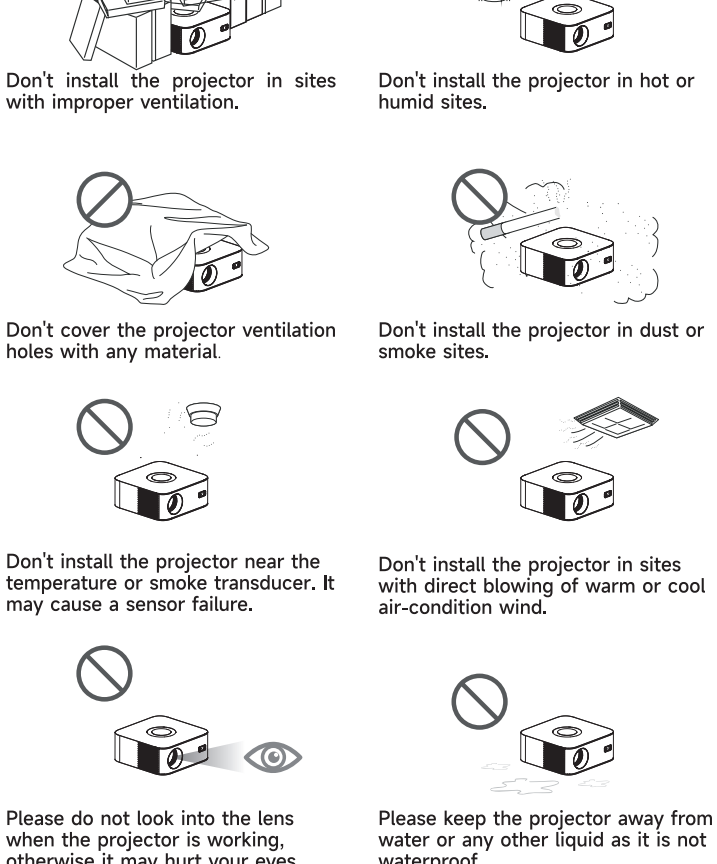

PACKAGE CONTENTS

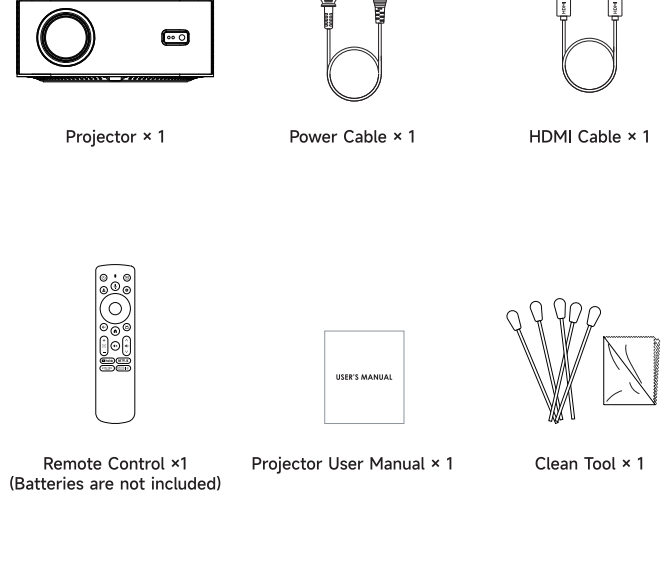 

Tips:

 
1. Blurry Image

- * First, wait for the projector to automatically keystone correct to a rectangular shape.
- * Second, use the remote control focus adjustment function for optimal sharpness.
- * Optimum projection distance: 1.5-2m.


2. Mounting Hole

Adopting a single mounting hole dual-use design, the projector is compatible with the standard camera tripod and 5/16 inch screw projector tripod stand. Meanwhile, you can rotate 360° the screw to meet different angle needs.

OVERVIEW

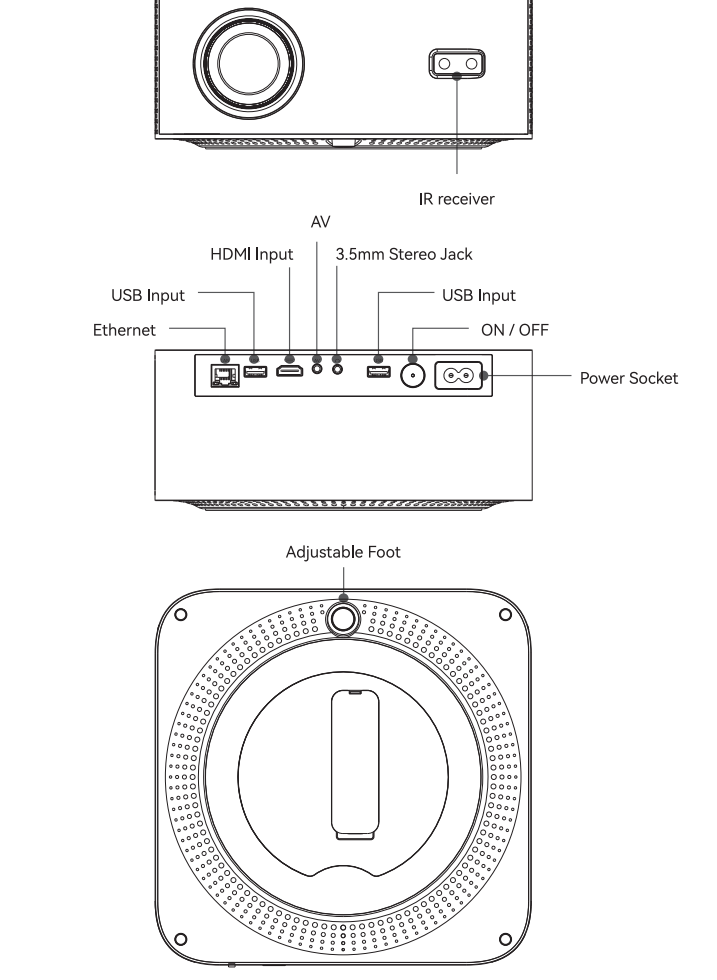


REMOTE CONTROL

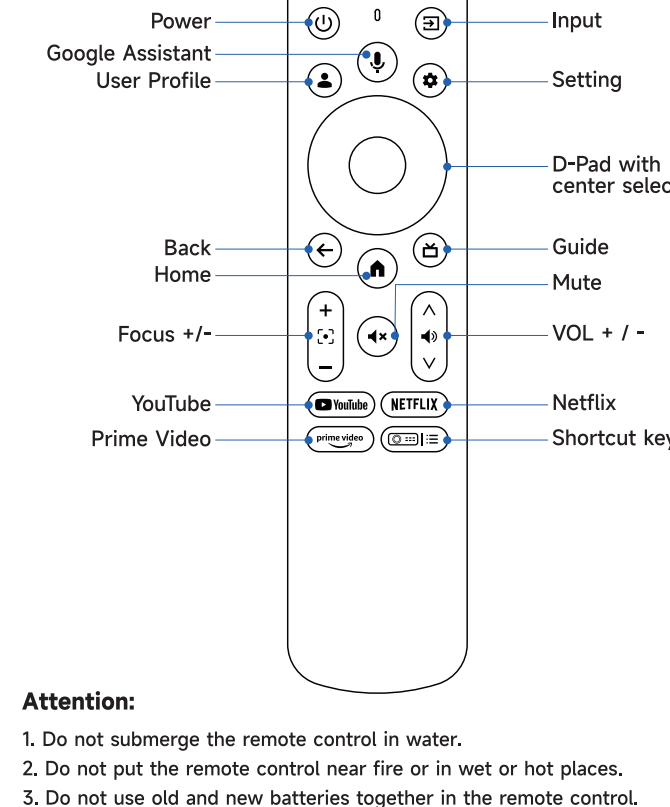 


Attention:

1. Do not submerge the remote control in water.
2. Do not put the remote control near fire or in wet or hot places.
3. Do not use old and new batteries together in the remote control.
4. Please take the batteries out if not using the remote control for a long time to avoid battery leakage.
5. Please point the remote control toward the IR receiver.
6. Please use the remote control within 6 meters distance and 30 degree angle.
7. If this part is missing, please contact our customer service email address in the Quick start guide or contact the seller you bought this device.

 GETTING STARTED

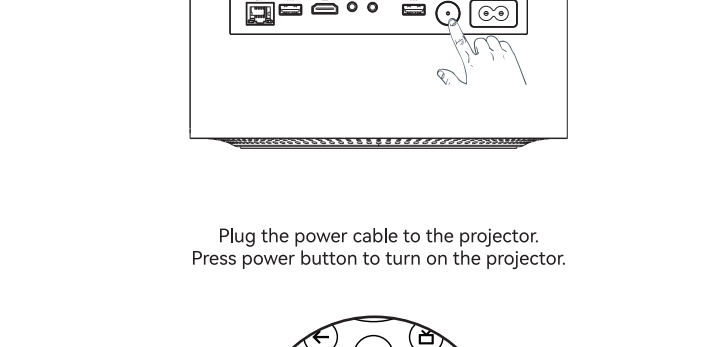

 Plug the power cable to the projector. Press power button to turn on the projector.

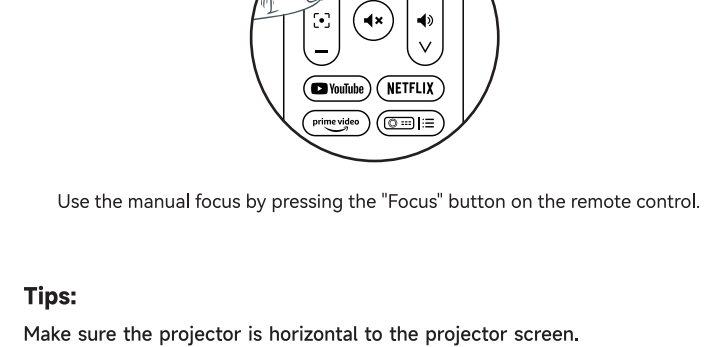

Use the manual focus by pressing the "Focus" button on the remote control.

Tips:

Make sure the projector is horizontal to the projector screen.

POWER ON & INITIAL SETUP

 
Step 1

Plug in the power cord and connect the projector to a power source.

- a. Press the power button located on the projector.
- b. The projector will start initializing and display the startup screen.


Step 2

Follow the on-screen instructions to pair the remote control with the projector.

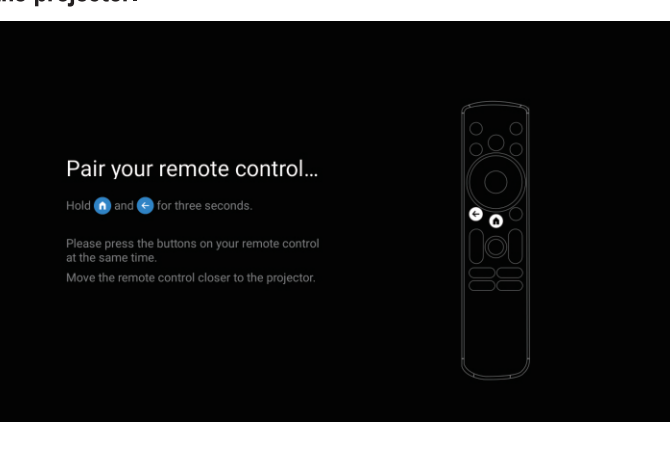



Step 3

 Set your language and country (language can be changed anytime after the initial setup).

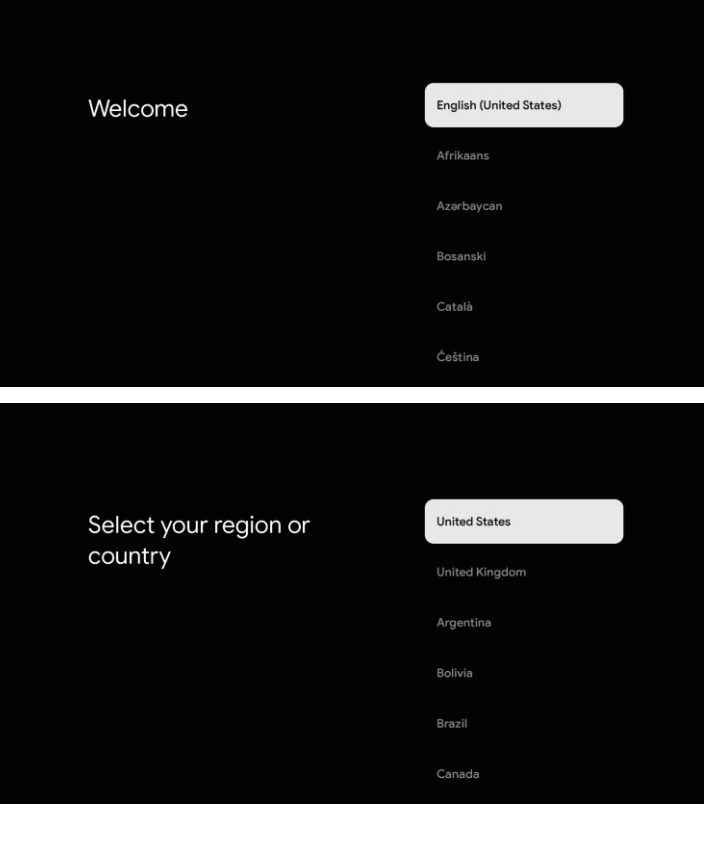


Step 4

 Select your Wi-Fi network and wait for the connection to be established successfully.

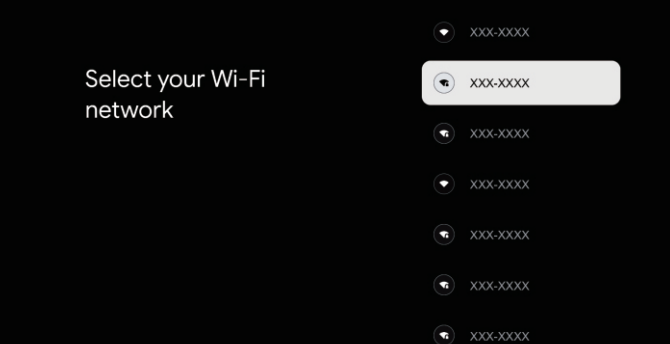Step 5

 Click "Accept".

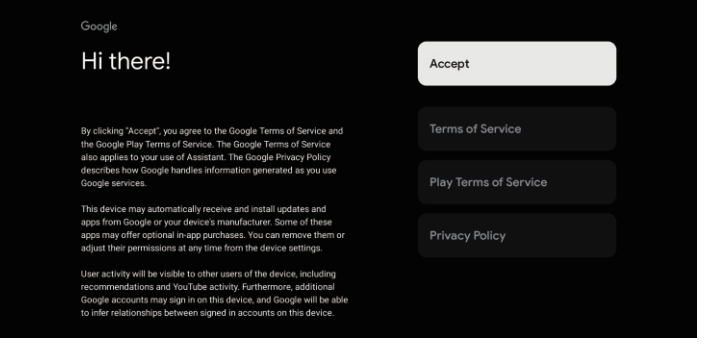


Congratulations! You can now begin your movie-watching journey!


OTHER SETTINGS

Settings

 You can access it by clicking the gear icon in the top right corner of the dashboard or by pressing the button on the remote control.

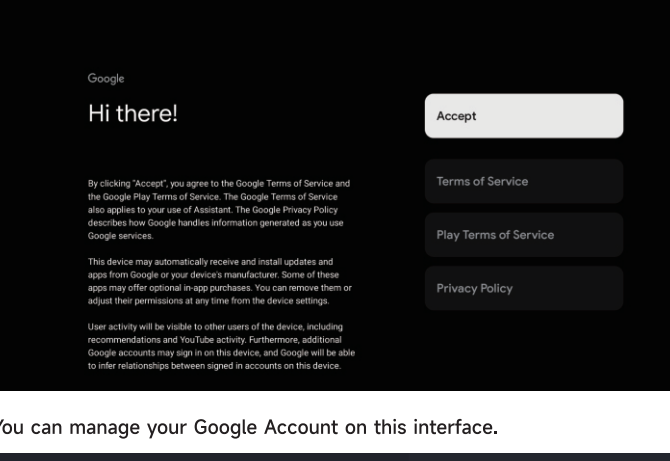


 You can manage your Google Account on this interface.

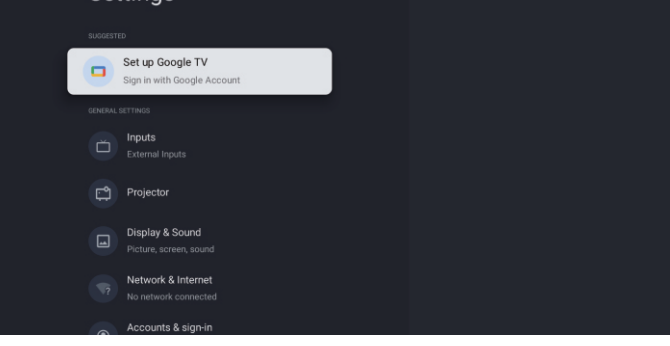


Projector Settings

 By clicking on the "Projector" option in the menu or using the button on the remote control, you can access the projector settings page.

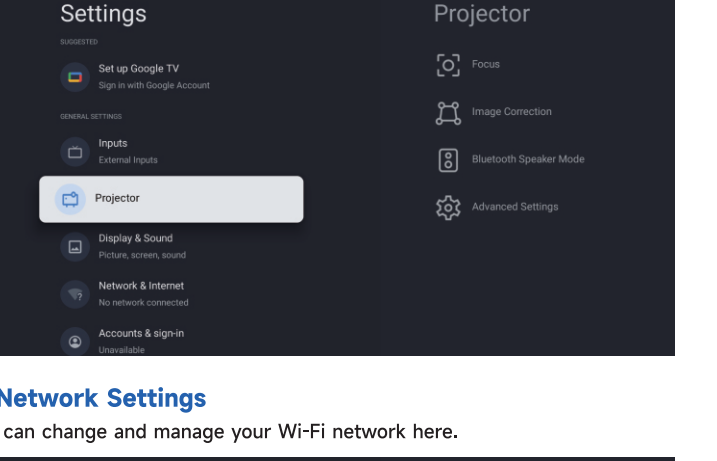


Network Settings

 You can change and manage your Wi-Fi network here.

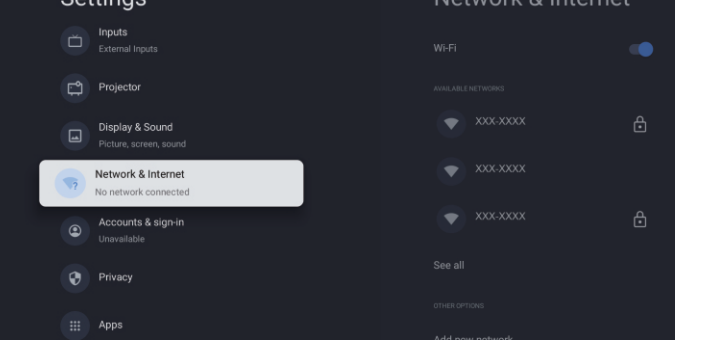

Bluetooth Speaker Mode

 Bluetooth speaker mode is being opened, 10s after entering the screen off state. Press and hold the button for 2s to exit.

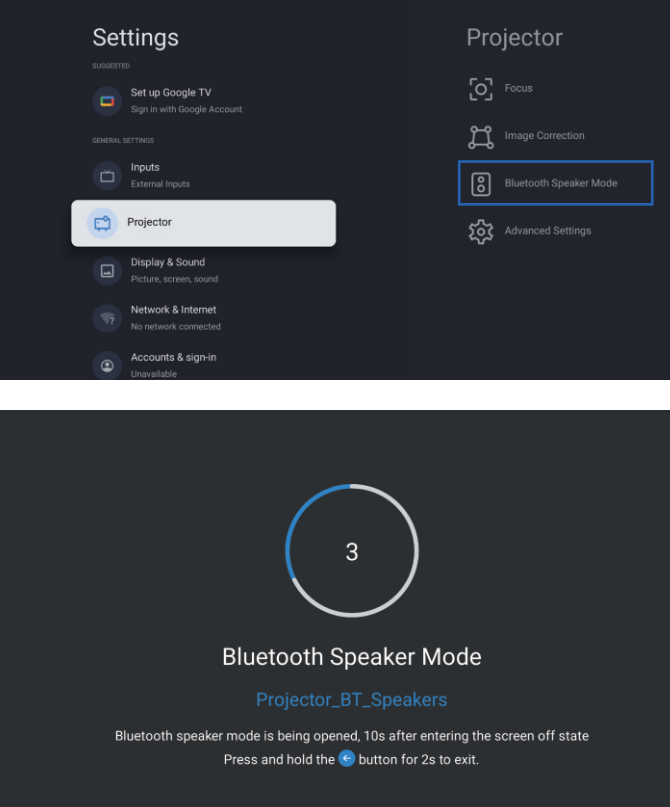

Note: Any damage caused by physical impact, water/ liquid, fire, etc. caused by the customer or nature shall not be covered under warranty.

Only product design, feature and functionality-related faults can be considered. As per the brand's discretion, the product is eligible for repair and not for replacement, during the warranty period.