



Breeze 6

35W Portable Bluetooth Speaker




Thank you for purchasing the Breeze 6 portable speaker. To ensure correct operation, please read this manual carefully before using the product.

USER MANUAL

Package Contents:

- Breeze 6 Wireless Speaker x 1N
- USB C Charging Cable x 1N
- User Manual x 1N

Product Details:

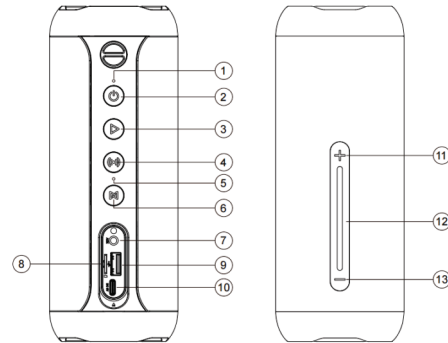

1. Bluetooth indicator
2. Long press: Power on/Power off
Short press: Switch the working mode
3. Long press: Auto searching the FM channels under FM mode
Short press: Pause/Play
Double press: Switch lighting mode & turn off the lighting mode
4. Long press: Disconnect the Bluetooth pairing
Short press: Answer/end the call
Double press: Reject the call
5. TWS mode indicator
6. Short press: Enter/Exit the TWS function
Double press: Clear the TWS pairing memory
7. Aux in port
8. Micro SD Card Slot
9. USB Slot
10. Charging Slot
11. Long press: Next track/FM channel
Short press: Volume up
12. Lighting beam
Music Volume / Battery Capacity / Lighting mode
13. Long press: Precious track/FM channel
Short press: Volume down

OPERATION INSTRUCTIONS

1. Power on/off

1. To power the speaker on/off, long-press the (⏻) button.
Please note: The default operating mode is Bluetooth mode, with the default volume set to around 50%.

2. Bluetooth Connectivity

1. Turn on the Bluetooth feature on your phone.
2. Search for nearby devices.
3. You will find "Breeze 6" in your mobile's pairing list; please select and connect to it.
4. Once connected, the speaker will prompt "You are now connected," and the Bluetooth indicator on the speaker will stop blinking and turn blue.
5. Activate the music player on your phone, and the speaker will play the selected music.

Note:

- The speaker will automatically pair with the last used Bluetooth device.
- You can manually disconnect the current Bluetooth connection by long-pressing the (⏻) button.
- To reconnect, simply continue to long-press, and Bluetooth will re-establish the connection.

- When you receive a phone call, press the (📞) button once to answer the call, and press it again to hang up.
- To reject a call directly, double-press the (📞) button.

3. Playing Music from a USB Flash Drive

1. Insert the USB Flash Drive into the speaker, then briefly press the (⏻) button to enter USB mode.
2. The speaker will prompt "USB Flash Drive Mode," and will start playing music from the USB drive.

4. Aux-In Mode

1. Use the 3.5mm audio cable to connect the speaker to an audio source (such as a PC, MP3/MP4 player, or mobile phone).
2. Short press the (⏻) button, and the speaker will prompt "Aux Mode."
3. The speaker will play the music from the connected audio source.

5. Micro SD Card

1. Insert the Micro SD card into the card slot.
2. Briefly press the (⏻) button to switch to Micro SD card mode, and the speaker will announce "TF Card Mode."
3. The speaker will automatically start playing the music from the Micro SD card.

6. TWS (True Wireless Stereo) Function (only works in Bluetooth mode)

1. Turn on both Breeze 6 speakers (Make sure both speakers are in Bluetooth pairing mode).
2. To activate or deactivate the TWS function, simply press the (⏻) button on either one of the speakers.
3. After successfully pairing the two speakers, the ◦ TWS light indicator on the master speaker will flash in blue, while the ◦ TWS light indicator on the slave speaker will flash in orange.
4. Use your phone to pair with the master speaker (Breeze 6) and enjoy Bluetooth music playback on both speakers simultaneously.

Please Note:

1. The 2 speakers should be in a waiting state for Bluetooth pairing.
2. In TWS mode, if you turn off one of the speakers, the other speaker will automatically turn off.
3. The two speakers will automatically reconnect after the initial connection when they are within the connection range.

7. FM Mode

1. Power on the speaker.
2. Short press the (⏻) button to enter FM Radio mode.
3. Long press the (▶) button for 3 seconds to automatically search for local channels.
4. After finding a radio channel and playing it for 3 seconds, the speaker will continue searching for the next radio channel.
5. After searching, it will play the last channel.

To switch to the next channel, long press the (+) button. Similarly, long press the (-) button to switch to the previous channel.

Please Note:

For improved FM signal reception, the lighting will automatically turn off in FM mode.

8. Colorful Ambient Lighting

Three Lighting Effect Modes:

1. Rhythm with Music Mode
2. Colorful Flow Light Mode
3. Breathing Light Mode

Double-press the (▶) button to switch the light mode and turn off the lighting.

9. Charging Function

1. When the battery is low, the speaker will prompt "Low Battery, Please Charge," and the light will flash in red for 3 seconds. The speaker will automatically power off. Please charge the battery via a USB adapter immediately.
2. When the speaker is powered off and charging, the indicator light will turn red and display the current battery capacity. After it is fully charged, the red light will stop flashing.

Please Note:

- Use a high-quality adapter to charge the speaker. We recommend an adapter with a specification of 5V/2A.
- When the speaker has low battery capacity, please charge it immediately.
- Do not charge in sub-zero environments, as charging below zero may damage the battery.
- Do not use the speaker while it is charging, as the output power is lower than normal working status.

Troubleshooting

Issue: The speaker cannot pair with the Bluetooth device and play music as expected.

Solution:

1. Check the specifications or manual of your Bluetooth device (e.g., mobile phone or computer) to verify if it supports A2DP stereo audio transmission. If it does, please ensure that A2DP stereo mode is enabled.
2. Make sure the speaker is in Bluetooth pairing mode. If there are multiple Bluetooth devices in close proximity, the Breeze 5 may not be easily discoverable. To resolve this, turn off other nearby Bluetooth devices.

Technical Data

- Bluetooth Version : 5.3
- Driver : 53*93mm bass driver*1+36mm tweeter*1 + passive radiator* 2
- Output : 35w
- Aux In : 3.5mm
- Li-Battery : 7.4V 2500mAh
- Dimensions : Φ88.4*H227.9mm
- Charging jack : USB C
- Weight : 740g
- Working time : more than 10 hours
- Bluetooth Distance : Single mode at 10m, TWS mode 5m

Important Safety Instructions

- Do not use the speaker in excessively cold or hot environments.
- Please avoid dropping the speaker or subjecting it to impacts with hard objects, as this may cause damage to its hardware.
- Take care when charging the speaker. Prolonged charging can damage the battery life. Charge the speaker to full capacity when using it for the first time.
- When the battery is low, the indicator light will flash in red, and a voice prompt will say, "Low Battery, Please Charge." Please charge the speaker promptly.

- If the speaker is not used for an extended period, please charge it at least once a month. This helps prevent excessive battery consumption, which can damage the lithium battery.
- Adjust the volume to an appropriate level to avoid disturbing others.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245, 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3recycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste