

CHICKLET

Foldable Bluetooth Keyboard



USER MANUAL

- BUTTON**
- On/Off Switch** Push the switch to "ON" and the keyboard is turned on.
 - Connect** Press "Connect" key 2 to 3 Sec, Keyboard blue light is flashing, indicating that the keyboard enters the pairing mode.
- LED**
- Charge** When the led lamp is flashing, it indicates that the battery in the keyboard will be used up, and the keyboard needs to be charged in time; when the keyboard battery is full, this indicator is automatically extinguished.
 - Status Light** When the device powers on, the light twinkles quickly, Press Connect button 2 to 3 sec, The light will start twinkling slowly to pair.


WIRELESS KEYBOARD

- Press the "Connect" key 2-3 sec, Keyboard blue light is flashing, indicating that the keyboard enters the pairing mode.
- Now please turn on the Bluetooth function of your mobile/tablet/other devices. And start to search for Bluetooth devices, the "Chicklet" will be found, please connect it. When connected successfully, the blue light will turn off.

TECHNICAL SPECS

- Working Distance : 8 to 10 meters
- Bluetooth Version : Bluetooth 3.0
- Working Time : Above 140 hrs.
- Standby Time : Around 6 Months
- Battery Capacity : 180mAh
- Keyboard Expand Size : 314 x 85 x 7.5mm
- Weight : 175gm

PRODUCT APPEARANCE AND MULTIMEDIA FUNCTION KEYS INTRODUCED

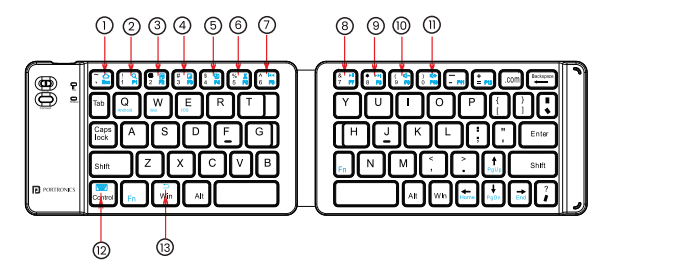

SHORTCUT QUICK LIST

No	Function keys	Apple (MAC OS, iOS)	Windows	Android
1	Esc	return to home page	return to the current page	return to home page
2		Search	Search	Search
3		Select all	Select all	Select all
4		Copy	Copy	Copy
5		Paste	Paste	Paste
6		Clipping	Clipping	Clipping
7		Play the previous song	Play the previous song	Play the previous song
8		Play/Pause	Play/Pause	Play/Pause
9		Play the next song	Play the next song	Play the next song
10		Volume reduction	Volume reduction	Volume reduction
11		Increase the volume	Increase the volume	Increase the volume
12		Opens the soft keyboard	Not applicable	Not applicable
13		Not applicable	Not applicable	return to the current page

SLEEPING MODE

If 10 minutes no use the device, it will come into sleeping mode. When you start to use again, press anykey, and waiting for 3 seconds, the keyboard will work again.

PRODUCT FEATURES:

- Wireless Keyboard**
Simply pair this keyboard with your gadget via Bluetooth. You don't need to install any software.
- Lightweight & Powerful**
Compact and lightweight makes it perfect for traveling. Take this stowaway portable fold away pocket Bluetooth keyboard on business travels or to class for note-taking, and skip lugging around a heavy laptop.
- Highly Compatibility**
Compatible with 3 major operating systems iOS/Windows/Android Supports most bluetooth-enabled devices.
- Power Saving Mode**
Its auto power off and sleep mode function helps to conserve the battery.

Long Lasting Battery Life
Work up to 140 hours on a single charge or standby up to 6 months with our collapsible cordless keyboard.

WARNING/DISPOSAL OF UNIT
Please do not attempt to change the battery yourself. If the battery has permanently died and you do not want to replace your battery, you should follow the disposal instructions below:

Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
Always dispose of used batteries/electronics in accordance with the prevailing regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.

CAUTION
Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance.

Always confirm that the temperature is 5°C – 50° C before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.
Never expose the battery to any liquid.
Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
Always keep the battery out of the reach of infants and small children.

IMPORTANT SAFETY INSTRUCTIONS
This unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. It is suggested to keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Ventilation – The unit should be situated at proper location or position. So that, it does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. Heat – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. Power-Cable Protection – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. Cleaning – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
7. Objects and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. Attachments – Do not use attachments not recommended by the product manufacturer.

9. Overloading – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
10. Damage Requiring Service – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure. C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. Periods of Non use – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. Servicing – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

NOTE: Any damage caused by physical impact, Water/liquid, fire etc caused by customer or nature shall not be covered under warranty. Only product design, feature and functionality related faults will be considered.



www.portronics.com
For Support
 Visit : www.portronics.com
 E-mail : help@portronics.com
 Contact No.: +91 9555245245, 011-42413131
 (Working Hrs.: Monday – Saturday 10:00am – 6:00pm)

E-Waste Management
 E: info@3rrecycler.com
 For E-Waste & ROHS compliance refer to www.portronics.com/ewaste