

DASH 12

60W Wireless Speaker With Wired Karaoke Mic



Welcome to the world of Portronics- It's time to elevate your music listening experience with Dash 12 Wireless Speaker. We recommend you to go through the User manual to understand it's working properly.

User Manual

Features:

- 2.1CH portable Bluetooth fabric speaker
- Water resistant IPX5, splash-proof, rainproof, perfect for beach, poolside, boat and more outdoor activities
- Dedicated button for TWS function, achieve true wireless Bluetooth playing with double enhanced stereo sound
- Karaoke function with single input for one wired microphone
- Optimized voice assistant control
- Hands-free Mic for easy picking up the call
- EQ function offering dynamic sound effect
- RGB Lighting
- Combined port for USB playback and Power bank 5V, 1A output
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device
- Line-in function, suitable for PC, MID, TV and other audio devices
- Built-in lithium rechargeable battery 7.4V 6600mAh
- Strong carry handle, easy to take out


Specifications:

Bluetooth version: V5.0
 Horn Size: 3 inch*2
 Subwoofer Size: 5 inch
 RMS Power Output: 60W
 Peak Power Output: 90W
 Battery Capacity: 7.4V, 6600mAh
 Play time: 5 hours at maximum volume
 Frequency Response: 50Hz-15kHz
 Bluetooth connecting range: 10m
 Product size: 458(L) *181(W) * 230 (H) mm

Package Contents:

- 1 x Portable Bluetooth Speaker
- 1 x Charging cable
- 1 x Audio cable
- 1 x User manual
- 1 x Wired microphone

Product Details:

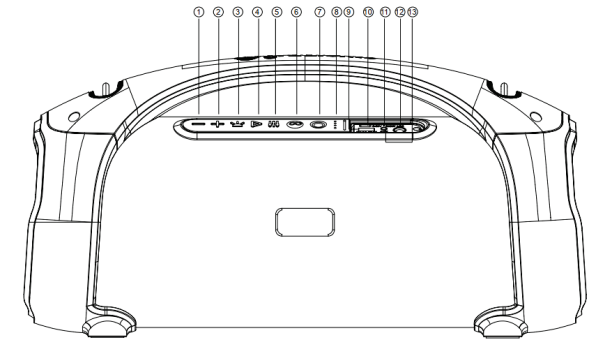

- | | |
|-------------------------|---|
| 1. Backward/Volume down | 8. Battery Indicator |
| 2. Forward/Volume Up | 9. USB Playback/Power Bank 5V 1A Output |
| 3. RGB Light | 10. Charging jack |
| 4. Play/Pause | 11. Reset jack |
| 5. EQ Button | 12. MIC port |
| 6. TWS Button | 13. AUX IN port |
| 7. Power On/Off | |

Power On/Off:

Long-press the Power button to turn the speaker on and off.

Bluetooth:

- Turn the power button to "ON", the speaker enter Bluetooth mode automatically, it will prompt for pairing.
- Activate Bluetooth of mobile phone and search for device name "Portronics DASH 12" then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones' volume.
- Short-press Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- Long-press TWS button to disconnect the Bluetooth connection with the mobile device.

Remark:

Under Bluetooth playing mode, inserting USB disk or AUX cable will disconnect the Bluetooth and switch to play the USB disk or connected external audio device. Pull the USB disk and AUX cable out of the speaker, the speaker will return to Bluetooth mode.

TWS Function:

- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Short-press the "TWS" button to pair, the TWS button will keep lighting after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
- Short-press the "TWS" button again to exit TWS mode.

Notes:

Under Bluetooth connected status, when short-press TWS button to make TWS connection, the Bluetooth connection will be disconnected first; After TWS connected, users need to search the Bluetooth device and connect again.

Playing music from USB disk:

- Turn the Power button to "ON".
- Insert USB flash disk into port, the music will be played automatically.
- Long press Forward or Backward button to select songs you like, short press to adjust the volume up and down.
- Press Play/Pause to play or pause.

Notes: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

Power Bank Function:

- Turn the speaker on.
- Connect other device to the 5V 1A out port via a charging cable.

AUX-IN:

- For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

EQ Introduction:

This unit offers 2 kinds of sound effect, short-press EQ button to change the EQ modes.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to turn the light off and on.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the Reset jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at 30% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- The charger is not included in the package, please charge the speaker via a standard 5V/1-3A charger or via a PC.
- Charge time should be 9-12 hours. After full charging, the 4 LEDs is off when speaker off.

IMPORTANT:

When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.

Warning:

- Don't use/store this speaker in extreme temperatures.
- Please store it in cool and dry area, keep away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- When cleaning this speaker, use a soft dry cloth. For more sever stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

