



HARMONICS TWINS S14

Smart OWS Earbuds

User Manual

Package Contents

1. Twins S14 IN
2. Cable IN
3. User manual IN
4. Charging case IN

The First Pairing (Power On)

Step 1: To switch on the earbuds, just pull them out from (inside) the charging case. With the auto power feature, the earbuds automatically switch on every time you take them out of the case.

Step 2: After powering on they go into connectivity mode with voice prompt "pairing" to pair with your smartphone/tablet via Bluetooth. This action is indicated by green LED lights that begin to flash.

Connectivity Mode:

Step 1: Turn on bluetooth on your smartphone/tablet.

Step 2: In the device, search menu look for "Portronics Harmonics Twins S14"

Step 3: Tap and connect for the voice prompt to confirm the "Connected" status. Happy listening.

Note: The pairing mode is active for a time period of 5 mins, if not paired in that time the earbuds will switch off.

Touch Features Explained:

Short Press to:-

1. Pick/End calls
2. Play/Pause music/video playback.

Short Press to:-

reject an incoming call.

Double Tap R earbud to:-

To jump to the next song/video

Double Tap L earbud to:-

To jump to the previous song/video

Triple Tap R earbud to:-

Increase Volume

Triple Tap L earbud to:-

Decrease Volume

Long press L earbud to:-

Activate Voice Assistant

Long press R earbud to:-

Activate Game/ Music mode

When using a single earbud

Step 1: You can use both buds in mono mode. Just follow the general procedure to power on and pair.

Step 2: Your selected earbud will automatically switch to connectivity mode indicated by white LED light flashes.

Step 3: Turn on Bluetooth on your phone/tablet device and search for "Portronics Harmonics S14" to connect/pair.

Notes:

- Simply remove the other earbud from the case to switch to Stereo mode (i.e., both earbuds L-R). It will automatically turn on and pair with the previously selected earbud, enabling stereo playback.

- You cannot skip tracks or return to the previous tracks in Mono mode

Charge the Earbuds:

Step 1: Place the earbuds back inside the charging case in the correct orientation.

Step 2: When the case lid gets closed, the case LED light indicates that the earbuds are being charged.

Step 3: The LED display indicates charging and the battery left in the case.

Step 4: When the case is fully charged, The LED display indicates 100%

Note:

- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging.

- When the battery is 20% or lower, the LED blinks once every 30 seconds to indicate the same.

Charge The Case:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/powerbank, etc.

Voice Assistant:

Step 1: Long press L earbud to activate the smartphone's voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at your convenience.

Tips: You may try these commands:-

What is the weather like today?

Play a song
Set a reminder

NOTE: If you're unable to access/trigger the voice assistant, you need to manually enable voice assistant in your smartphone's settings.

Switching Off the earbuds

Step 1: Please remove both earbuds from your ears after usage.

Step 2: Place the earbuds back in the charging case.

The earbuds will automatically switch off (and enter charging mode).

Manual Power OFF

Step 1: Long press (L-R) earbuds and wait for the voice prompt "Power off" indicated by white LED lights.

Step 2: Place the earbuds back in the charging case.

How to reset the earbuds

Step 1: Place earbuds back inside the case.

Step 2: Unpair the earbuds from the device's Bluetooth.

Step 3: In connectivity mode, long press (L-R) earbuds till they power off.

Step 4: Insert them in case and pair again.

Specifications

| | |
|-----------------------|------------------|
| Bluetooth Version | : V5.2 + EDR |
| Charging case battery | : ≥ 200 mAh |
| RF transmit | : < 8dBm |
| RF sensitivity | : -90 dBm |
| Charging Time | : about 2 hours |
| Cell Capacity | : ≥ 580 mAh |
| Earbuds Playtime | : 15 Hours |
| Mic Frequency | : 100-10KHZ |

Troubleshooting

| Possible Problem/Issue | Fix |
|---|---|
| If 1 earbud is not working | Follow: Reset the earbuds |
| If earbuds are not in connectivity mode | Follow: Reset the earbuds |
| If earbuds disconnect during phone call | Charge the earbuds or perform factory reset |
| If there are other exceptions in usage | Place the earbuds back into the charging case and try using them again or perform factory reset |
| If Touch Controls don't seem to respond | After long usage, residual stains & perspiration might affect the touch control area, please use a clean cloth to wipe those areas softly |

Warning:

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.

It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the earbuds' service life

Advisable: The earbuds start at 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone/media device



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245, 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@3recycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste