 


USER MANUAL

Product Introduction

1. Dust Collection Box
2. HEPA Filter
3. Power Button
4. Handle
5. Air Outlet

 
 
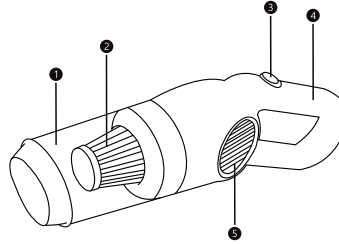 


Package Contains

- USB Charging Cable
- Tubular Sucker
- Extendable Straw
- Brush Attachment
- Broad Mouthpiece

Instructions

1. Connect the charger to fully charge the battery (the charging indicator is red; when fully charged: the charging indicator is green.)
2. Connect the corresponding accessories according to the use situation (the accessories are installed and used)
3. Turn on the power switch of the vacuum cleaner and start to work

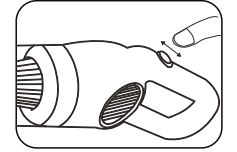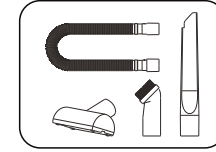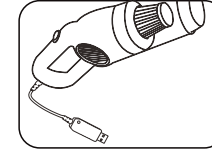

Note: It is recommended to use a 5V=2A adapter or car charger for charging the vacuum cleaner (charger not included in box)

Accessories Installation and Use

1. Suction nozzle: suitable for cleaning of doors, seats, cabinets corner, drawers and ashtrays.
2. Brush: it has double functions of absorbing and wiping. It is suitable for cleaning the dust on the surface of all kinds of cushions, foot mats, keyboards and air outlets.
3. Extended hose: Flexible and can be twisted at any angle, and can be used with other accessories to clean all kinds of hard to reach corners.
4. Floor brush: suitable for dust cleaning of floor, trunk, mattress, sofa and all kinds of large flat surface.



Disassembly and cleaning

1. Rotate the dustbin counter clockwise to remove the dust bin from the vacuum cleaner
2. Take out the HEPA filter in the dust container and dump the garbage into the dustbin.
3. If necessary, clean the dust container with a lightly damp microfibre cloth or disposable paper towel. The filter screen can be washed with water. After washing, it must be completely dried and then used again.
4. Reinstall the dust container, put the HEPA filter net into the dust container, rotate it in the opposite direction according to step 1, and tighten it.



Precautions

1. Do not dismantle, repair or refit this product.
 2. Do not cover the air inlet or outlet when operating the product, otherwise the product may be deformed or catch fire due.
 3. Do not inhale combustibles, such as cigarette ends, when using this product.
 4. Please keep this product away from children.
 5. Do not clean the product with severely corrosive liquid, such as Tianna water, paint, etc.
 6. Before charging, please make sure that the power button is turned off. Do not use while charging.
- Note:** Any damage caused by physical impact, water/ liquid, fire, etc. caused by the customer or nature shall not be covered under warranty. Only product design, feature and functionality-related faults can be considered. As per the brand's discretion, the product is eligible for repair and not for replacement, during the warranty period.

www.portronics.com
For Support
Visit : www.portronics.com
Email : help@portronics.com
Contact No. : +91 9555245245
(Working Hours : Monday - Saturday, 10:00am - 6:00pm)