 




# MOPCOP 4

Vacuum Cleaner & Blower

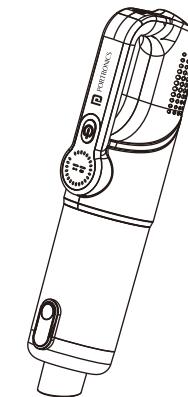


User Manual  
Quick Installation Guide


## SAFE OPERATION MANUAL

- Please read all contents of this manual carefully before using this product.
- Any operation inconsistent with the instructions in the manual may cause serious personal injury, property loss or damage to the product itself.
- Please read the instructions that are very important to your personal safety carefully to avoid accidents and possible damage to the product.
- Please be very careful when working with the product to avoid danger
- Keep the product properly and keep it out of the reach of children and people who are unable to judge the environmental risk.
- Do not store the product at a high place to avoid the risk of accidental fall.

## PRODUCT MIX

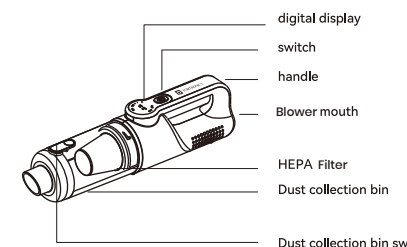


## ACCESSORIES LIST

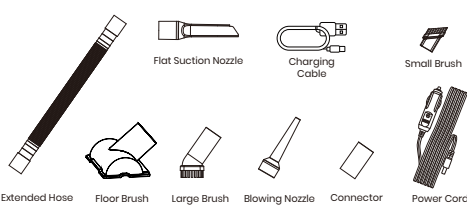

## METHOD OF USE - CORDLESS

- Connect the charger to fully charge the battery.
- Connect the corresponding accessories according to the usage scenario (installation and use of accessories).

- Turn on the power switch of the vacuum cleaner to start working.

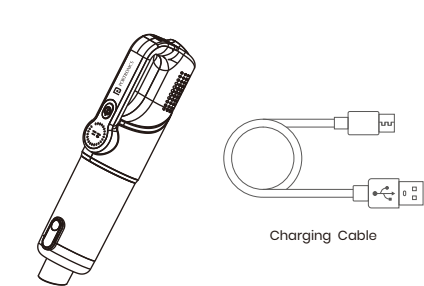

## PLEASE NOTE


- The vacuum cleaner cannot be operated while charging using a type-c cable. Please ensure the device is fully charged and the type-c charging cable removed from it before use.
- The appliance cannot be used in cordless mode if the car plug power cord is attached to the device.
- The LED indicator displays the charging status of the vacuum cleaner. If the Red Light is turned

on, then the vacuum cleaner is currently charging. if the Green Light is turned on, the vacuum cleaner is fully charged and ready for use.

- The vacuum cleaner & blower requires approximately 4 hours 30 minutes to charge fully.
- The battery indicator consists of 24 LEDs, representing a charge level from 0% to 100%. For every 25% reduction in battery level, 6 LEDs will turn off simultaneously.


## METHOD OF USE - CORDED

- Connect the power cord to the cigarette lighter port of the car and the vacuum cleaner.
- Connect the corresponding accessories according to the usage scenario.
- Turn on the car to provide power to the vacuum cleaner (turning on the engine not necessary).
- Long press the power button to turn on the vacuum cleaner and press power switch again to switch to the higher vacuum speed.

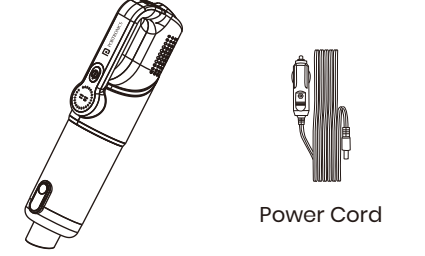


## DUST COLLECTION MODE

Insert the two in one flat suction into the suction port of the host;

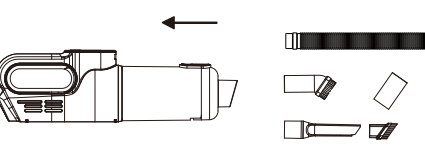

## BLOWING MODE

According to the arrow direction as shown in the figure, Install the air nozzle on the host.

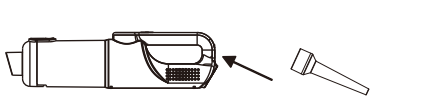

## WORKING MODES AND DURATION



- Max Mode: Provides maximum power for heavy-duty tasks. The inflator runs continuously for 15 minutes in this mode.
- Eco Mode: Offers extended operation for lighter tasks. The inflator runs continuously for 30 minutes in this mode.

## PRODUCT DISASSEMBLY AND CLEANING

- Gently press the lock buckle, open the cup cover of the dust collection bin, and pour out the garbage
- Rotate the dust bin counterclockwise to remove it from the machine body
- Remove the filter component from the dust bin and pour the garbage into the trash can.
- Rotate the coarse filter steel mesh counterclockwise to remove it from the HEPA filter.
- The dust collection bin, steel mesh, and filter

element can all be washed clean with clean water and left completely dry Reinstall in order.

**Attention :** The body cannot be washed with water. It can be wiped with a soft damp cloth. Do not let water enter the charging port. It is recommended to replace the filter element every three months.

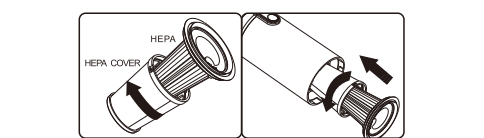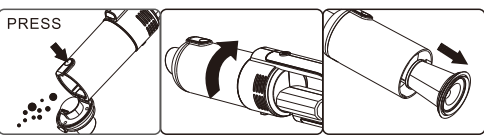

## GENERAL FAULT ANALYSIS AND TREATMENT

FAULT TYPE	POSSIBLE CAUSES	TREATMENT METHOD
Machine inoperative	Insufficient battery current	Timely charging
	Machine power switch not activated	Start power switch
Unable to charge	Check whether the adapter is 2V	Select 2V adapter
	Circuit board broken	Contact customer service
Machine suction decreases	The filter screen or filter cover is blocked	Timely cleaning
	Low battery	Timely charging
Excessive noise	Machine suction outlet blocked	Clean the suction port
	Dust collecting cup is full	Clean the dust collecting cup
	The suction port of the machine is blocked	Clean the suction port
	Machine suction outlet blocked	Clean HEPA filter screen
	Filter assembly not installed	Install the filter assembly

## NOTE

Any damage caused by physical impact, Water/liquid, fire etc caused by customer or nature shall not be covered under warranty. Only product design feature and functionality related faults will be considered This mouse will come under non-repairable category



www.portronics.com

For Support  
Visit : www.portronics.com  
Email : help@portronics.com  
Contact No. : +91 9555245245

(Working Hours : Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management  
E: info@3rrecycler.com  
For E-Waste & ROHS compliance refer to www.portronics.com/ewaste