





Portable Speaker with Digital Alarm Clock

# User Manual

# Temperature Display:

Under clock mode: Speaker display time, temperature and power percentage alternately at a time interval.



Notes: Due to the built-in temperature sensor, it may cause deviation from the actual temperature by the environment changing.

# Power Percentage Display:


Under clock mode: Time, temperature and power percentage will be displayed alternately at a time interval



### Package Contents:

- · Portable Speaker with Digital Alarm Clock
- · Charging Cable
- User Manual

Note: Charge for 1 Hour Before First Use

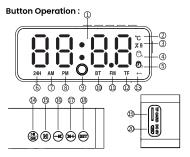

- 1 Display Screen
- (4) (7), : Alarm 1 Indicator
- ② °C: Temperature
- (5) (7),: Alarm 2 Indicator
- ③ % 1 : Battery Percentage 6 24H: 24-Hour System
- 7 AM: 12-hour system, shows morning time.
- (8) PM: 12-hour system, shows afternoon time.
- (9) Motion Sensor: The speaker features an intelligent system that seamlessly transitions between playback modes. In the event of a TF card playback cessation or a 10-minute Bluetooth disconnection,

the device will autonomously shift to clock mode, ensuring continuous functionality. Additionally, an automatic shutdown occurs 10 seconds after entering clock mode. Moreover, when the motion sensor detects human body movement, it triggers the activation of the speaker into clock mode for 10 seconds, followed by an automatic shutdown.

(I) BT: Bluetooth mode display (1) FM: FM radio mode display

TF: TF card playing mode display

- MIC (Microphone Hands free)
- $\textcircled{A} \xrightarrow{ON}$  To power on or off the device, press and hold the designated button. During music playback, a single press of the button allows you to play or pause the music instantly. When in FM mode, a press initiates an automatic station search, streamlining the tuning process
- (5) M: Hour system switching, press and hold for 24/12 hour system switch
- (6-K: Press for the last song or station, press and hold for volume down, and, in clock setting mode, press for digit decreasing and hold for quick digit decrease.

- (7) \*: A single press advances to the next song or radio station, while a press-and-hold action increases the volume. In clock setting mode, a press facilitates digit increase for precise adjustments, and a press-and-hold achieves a swift digit increase for efficient time setting.
- (8) SET: Press for switching on or off clock/alarm, press and hold for clock/alarm setting.
- (19) TF CARD: TF card slot
- @ DC 5V: 5V1A DC power input

### Speaker Operation Instructions:

#### Mobile phone Bluetooth Connection:

Turn on the speaker, it prompts voice for Bluetooth connection, switch on mobile phone Bluetooth setting and search Bluetooth pairing code, find it and pair it, speaker will prompt voice "Bluetooth has been connected when paired. Go to mobile phone music player and play.

# TE Card Slot :

Insert TF card with music files, press button "M" for switching TF card mode, speaker will play the music in the TF card.

#### FM Radio:

Press button "M" for switching to FM mode, insert the charging cable packed into micro 5 pin charging port as the cable serves as antenna, press button for FM radio stations auto searching and save, and then play the stations saved.

# **Clock Setting Instruction:**

 
Time Setting: click "SET" to turn off all alarm icons, press and hold button "SET", the display screen flashes for clock setting, click-"K," keys to adjust the desired number of clock hours, and then click "SET" for switching to "minutes" setting when flashing. Click "K, »+" keys to adjust the desired number of minutes, finish setting and then press and hold the SET" key for 3 seconds, it will automatically exit the current setting and automatically save.

### Alarm Setting Instruction:

Alarm 1 Setting : Click " SET" to enter alarm 1 mode (Only the alarm clock 1 Icon is displayed on the screen), press and hold "SET", the display screen flashes for "Hours" setting, click "-K, >H" keys to adjust the desired number of hours; and then again click "SET button for switching to "minutes" setting, when minute flashes, click="K", ">+" keys to adjust the desired minutes, finish setting and then press and hold the "SET" key for 3 seconds, it will automatically exit the current setting and automatically save.

Alarm 2 setting: Click "SET" to enter alarm 1 mode (Only the alarm clock 1 Icon is displayed on the screen), press and hold "SET", the display screen flashes for "Hours" setting, click #K, >+ " keys to adjust the desired number of hours; and then again click

"SET" button for switching to "minutes" setting, when minute flashes, click "K, "H" keys to adjust the desired minutes, finish setting and then press and hold the "SET" key for 3 seconds, it will automatically exit the current setting and automatically save.



# Hands Free Function:

- 1. Answer the phone: Under Bluetooth connection. when call is coming, press button to pick up and
- 2. Hang up: Under Bluetooth connection, press button to hang up when talking.
- 3. Reject the call: Under Bluetooth connection, when call is coming, press and hold button to reject the

Notes: The call function is only implemented in Bluetooth mode.

# Specifications:

Bluetooth Version : V5.3 : 5V~1A Power Input : 80HZ-20KHZ Frequency Response

Speaker Driver : 5W

**Battery Type** : 3.7V, 18650 Product Size : 118\*48\*35 mm

# DOS AND DON'TS

To ensure safe operations for your speaker, please follow these rules:

- 1. Always place the speaker in a safe location.
- 2. Avoid excessive pressure on either equipment.
- 3. When not in use, switch off the speaker and unplug them from the power source.
- 4. If the product is defective, kindly do not attempt to fix it yourself. We recommended professional help.
- 5. Keep the product away from water, to avoid internal damage.

#### www.portronics.com For Support Visit: www.portronics.com

Email: help@portronics.com Contact No.: +91 9555245245, 011-42413131 (Working Hrs.: Monday - Saturday 10:00am - 6:00pm)

