

PIXEL

Wireless Speaker With 32 LED Display Animations




Welcome to the world of Portronics- It's time to elevate your music listening experience with Pixel Bluetooth Speaker. We recommend you to go through the User manual to understand it's working properly.

User Manual

Package Contents

- Pixel
- Charging Cable
- User Manual

Product Overview:

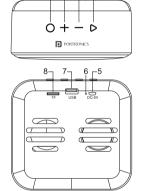

1. Play/Pause button Light button/TWS mode

2. VOL - button Backward button

3. VOL + button Forward button

4. On/Off button Switch animation mode button

- 5. Micro USB charging port
- 6. Power indicator
- 7. USB port for audio playback
- 8. TF card slot

Power Supply:

- 1. Check that the unit is switched off.
- 2. Insert the small end of the micro USB cable (included) into the micro USB charging port on the back of the unit.
- 3. Connect the other end of the micro USB cable into the USB port of your powered computer or USB type power adapter and connect it to a wall socket. The LED near the micro USB
- charging port lights up in red when the device is charging. 4. Once charging is completed, the LED light up in green .

Note: Please note that the micro USB cable can only be used for battery charging and not for data transfer.

To turn the speaker on/off, Press and hold down button on/off on the top of the speaker. A signal will sound.

To adjust the volume, press button "-" to decrease the volume and press button "+" to increase the volume.

The speaker offers various modes: Bluetooth, USB, and TF card (up to 32GB).

- To switch mode, double-click on on/off button.

Navigate Between Audio Tracks

- To pause playback, press play/pause button. To resume playback, press play/pause
- To play the next track, press and hold down button "+".
- To play the previous track, press and hold down button "-".

- 1. Activate the Bluetooth function on the speaker and your audio player (smartphone, tablet...) and make sure it is in discoverable mode.
- 2. Confirm pairing or select the Bluetooth name "Pixel" to connect your player to the speaker.
- 3. You can play an audio or a video file. The speaker will emit a sound after it has connected
- 4. To stop the connection with the speaker, press another mode on the top panel or a button on your audio player.

Once the connection has been stopped, the LED indicator will flash.

Connect Two Speakers In Stereo:

Step 1: Turn on TWS-enabled Bluetooth Speakers and switch them to Bluetooth Mode.

Step 2: To automatically pair both the devices, double Press on the Play/Pause button of any 1 speaker. Light will start blinking in one of the speakers once it is successfully paired.

Step 3: After pairing, you just need to turn on the Bluetooth feature of your smartphone and connect "Portronics Pixel" to start enjoying enhanced sound output.

Step 4: If you wish to disable the True Wireless Stereo feature, double press the play/pause button for 3 seconds and it will automatically disconnect

Light Effects

Press and hold for 5 seconds to turn the light effects on/off. To switch animation, press on/off button.

CAUTION: Too high volume can damage your hearing. For this reason, please turn the volume down.

Press and hold for 2 seconds, battery level. For 5 seconds, lights effects off.

Step 1: Insert Micro SD Card in the slot (Class 4 generation)

Step 2: It will automatically detect the SD Card and confirm 'Micro SD Card Mode'

Step 3 : Select the song, it will start playing

Connecting via Micro SD Card Mode

Connecting via USB MODE

Step 1: Insert the U disk in USB slot

Step 2: The speaker will detect the disk automatically and confirm "USB mode"

Step 3: it will play the music in the U disk automatically.

Specifications:

Material

: USB DC 5V/1A Input Power

Bluetooth Version : V5.0 Tansmission Distance : 10M

: 3.7V, 2400mAh Battery

Speaker Output : 8W Bluetooth Frequency : 2402-2480MHz Transmission Power : 6.75dBm

Size 128 X 128 X 63mm

ABS

DOS AND DON'TS

To ensure safe operations for your speaker, please follow these rules:

- 1. Always place the speaker in a safe location.
- 2. Avoid excessive pressure on either equipment.
- 3. When not in use, switch off the speaker and unplug them from the power source.
- 4. If the product is defective, kindly do not attempt to fix it yourself. We recommended professional help.
- 5. Keep the product away from water, to not cause internal damage.



www.portronics.com

Visit: www.portronics.com Email:help@portronics.com

Contact No: +91 9555245245, 011-42413131

(Working Hrs: Monday - Saturday 10:00am - 6:00pm)

