

# PURE SOUND 106

120W Bluetooth Soundbar with Wired Subwoofer



USER MANUAL

### Package Contents

1. Soundbar 1N

2. Wired Subwoofer IN 3. Remote Control 1N

4. User Manual 1N 5. Audio Cable 1N

## Remote Control

- OI STANDBY: When under standby mode, single press this key to start the working state when under working state, single press this key to Shut down info standby state.
- **02 MUTE:** Under all working states, single press this key to switch on and off the system of "mute" function.
- 03 INPUT: When working, simply press this button for "USB, AUX, BT, HDMI input loop switch.
- 04 BT: Press this button to select BT playback.
- **05 VOL+:** Single press this key to increase volume.
- 06 PREV: When under USB, BT status, single press this key to select "previous song" function: This function is invalid under
- 07 NEXT: When under USB, BT status, single press this key to select "next song" function; This function is invalid under
- **08 PLAY/PAUSE:** When under USB or BT state, single press this key to play or Pause. When under BT state,long press the "Play/Pause" button should be able to disconnect or connect back to BT device.
- **09 VOL-:** Single press to decrease the volume.
- 10 NEWS: Under all working states, single press this key into EQ1 sound mode: News mode
- 11 MOVIE: Under all working states, single press this key into EQ2 sound mode: Movie mode
- 12 MUSIC: Under all working states, single press this key into

### Eq3 Sound mode: Music mode

- 13 BAS+: Single press to raise the system bass.
- 14 BAS-: Single press to lower the system bass.
- 15 REPEAT FUNCTION: ONE: Repeat current song

ALL: Repeat all songs.

SHUF: Shuffle the songs and play again and again.

OFF: Play every song once, use their

: Single or long press this key to increase

the treble.

 
Single or long press this key to

decrease the treble.

### Remark:

- 1. Do not expose the apparatus to high temperature, weather,
- 2. Do not attempt to disassemble the product to avoid electric shock only professional should perform service.
- 3. Please turn off the power and pull out the plug when you do not use this product.

### Control Panel Diagram



5 VOL+/Next Music 9 BASS Out

2 MODE

10 DC in 7 AUX IN 11 Power ON Switch

12 AC IN 4 VOL-/Prev. Music 8 H-ARC

### **AC POWER**

### **IMPORTANT NOTES**

- Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage

A damaged power cord can easily cause an electric shock or fire hazard; Never use a power cord after it has been damaged.

### **Battery Installation**

- Open the battery flap
- Insert one battery without the polarity reversed.
- Close the battery flap
- Keep within 5 meter range, 30 degree angle while aiming at the unit.

 
Precautionary note:

Remove the battery when the unit is not being used for a long period of time.

Add only AAA batteries.

# 

### **Back Panel Connection Diagram**



Compatible with: TV, DVD, PC, Laptop, Tablet, Mobile, MP3 player etc.

V5.3

USB/BT/AUX/HDMI

10M(Without Barrier)

# www.portronics.com

60W

Email: help@portronics.com Contact No.: +91 9555245245, 011-42413131 (Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



Email - info@3rrecycler.com BAR:W600\*D71\*H71mm,

SW: W146\*D268\*H324mm Power consumption (St.By) :

AC100-240V 50/60Hz\_DC15V4A

Remote control range

Power consumption

User Manual, Audio Cable, Remote





control

Visit: www.portronics.com



For E-waste & ROHS compliance refer to http://www.portronics.com/ewaste.html