PORTRONICS

LUMISTICK PRO
Smart Selfie Stick

User Manual

Mobile phone clip
Fill-in light
Locking torque
Self timer lever auxiliary handle
Remote control storage
Aluminum alloy telescopic rod
Photo button 1
Direction keys
Like button
Photo button 2
Lanyard buckle
Power switch
Battery cover
Sliding sleeve
Telescopic support foot
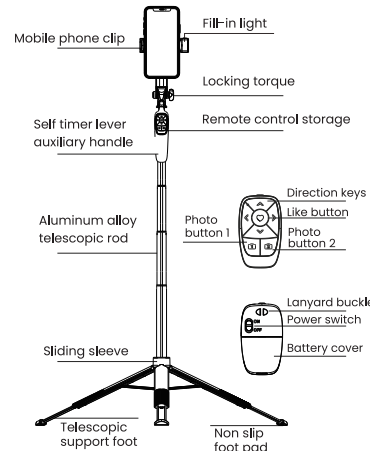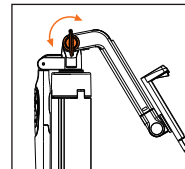**Non slip foot pad**
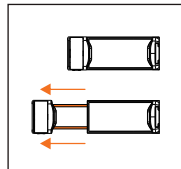

PACKAGING CONTENTS

Smart Selfie Stick X 1
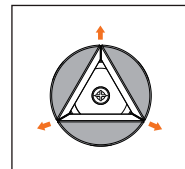User Manual X 1

Compatible with ☑ iOS ☑ Android
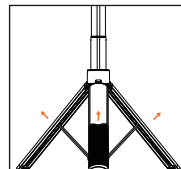

PRODUCT OPERATION STEPS

Loosen the twist head to adjust the angle up and down. Lock the twist head after completing the angle adjustment.
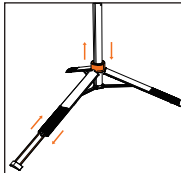
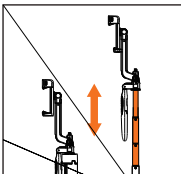Open the mobile phone clip, put the mobile phone in and clamp it.

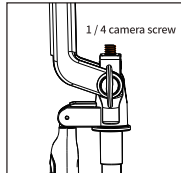First pull the tripod outward from the bottom.

Open the tripod outward.

Press and hold the sliding sleeve and pull it down until the end is fully deployed. The tripod can be telescopic and adjusted to different sizes to stabilize the support. When the support is retracted, press and hold the sliding sleeve to retract the support.
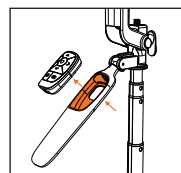
1/4 camera screw general photography accessories.

1 / 4 camera screw

Pull the telescopic arm to the required length.
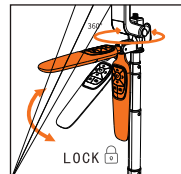
Open the unlocking handle upward to drive the mobile phone clip to rotate 360°, and press down to lock the handle.

LOCK

Push the remote control up to the maximum distance from the hole under the auxiliary handle with your finger, and take out the remote control.
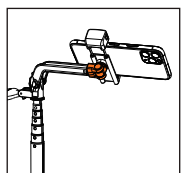
When shooting from the top, you only need to rotate the collet part 180° on the basis of shooting from the top to make the mobile phone shoot upward.
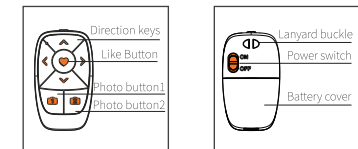
Operating Instructions Of Collet Fill Light

- Operation key
- Fill-in light
- Extensible interface
- Type-C charging port
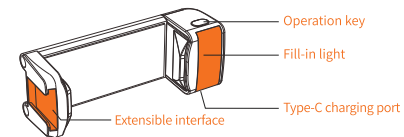
Operating Instructions:

- Double click the key to switch the machine on and off.
- After power on, click the key to switch the brightness of gear 3, and briefly press the third time to turn off the fill light.
- When the fill light is on, long press to enter the burst flash mode, then short press to turn it into sos signal light, and then press to turn it off.
- The collet fill light has an expandable boot mouth, which can be used for other photography accessories and more collets.

Operating Instructions of Bluetooth Remote Controller

Direction keys
Like Button
Photo button1
Photo button2

Lanyard buckle
Power switch
Battery cover

1. 1.Turn the back switch of the remote controller (ON/OFF), and the indicator light of the remote controller will flash automatically.
2. Turn on "Settings" – "Bluetooth" of the mobile phone, turn on Bluetooth, search for "Lumistick Pro", click the device name pairing, display "connected", the indicator stops flashing, that is, the connection is successful (the remote controller is turned on).

---

3. **Direction keys:** Watch the video of switching between the up and down keys of Tiktok. The left and right keys slide left and right.
4. **Like button:** Click pause/continue to play when watching Tiktok (double click like) or other video software, enter the shooting interface and click auto focus.
5. **Photo button1:** Support mobile phone camera / Beauty camera and other photographing software (connected to Bluetooth for instant use).
6. **Photo button2:** Support all software such as Tiktok/Kwai /wechat to shoot videos (a few models need to be set).

Special note: (when Apple IOS system setting and shooting key 2 are invalid, the setting method is as follows)

1. Apple IOS 13.4 above setting method: **A.** Mobile phone Bluetooth on the remote control link **B.** the screen automatically rotates and locks **C.** turn on settings - auxiliary functions - touch - auxiliary touch - turn on **D.** the above systems need to be calibrated for the first time. Find the tracking sensitivity of the auxiliary touch and move the dot to the left and then back to the default position.
2. Method of adjusting shutter key position when shooting key 2 is invalid: **A.** Enter the software photographing interface **B.** press the photographing key 2 for a long time without letting go **C.** at the same time, press the direction key for a short time to move the "pointer / dot" to the range of the photographing software shutter circle.

SPECIFICATION

Main Material : Aluminum Alloy + ABS Plastic
Support System : Android, iOS
Maximum Stretching : 86mm
Folding Size : 45 x 98 x 290mm
Standby Time of Fill Light : 30 Day
Working Voltage : 3.6~4.2V
Operating Temp : 20~60 Degree
Charging Voltage : DC 5V
Fill Lamp Battery Capacity : 55 Mah
Service Time of Fill Light : 40~180min
Charging Time of Fill Light : 60min

PORTRONICS

E-waste Management
Email - info@3reycler.com
For E-waste & ROHS compliance refer to
http://www.portronics.com/ewaste.html